




Installation manual


M Motorized TV Lift X-Large

EAN: 7350105214066


- (en) Installation Manual
- (ar) تثبيت التلفاز
- (cz) Instalační manuál
- (de) Installationsmanual
- (de) Installationsanleitung
- (es) Paigaldusjuhend
- (el) Οδηγίες εγκατάστασης
- (es) Manual de instalación
- (fi) Asennusohje
- (fr) Installation Manuel
- (he) התקנתה
- (hu) Szerelési kézikönyv
- (it) Manuale di installazione
- (ja) 取り付け説明書
- (kr) 설치 설명서
- (lt) Montavimo instrukcija
- (lv) Uzstādīšanas rokasgrāmata
- (nl) Installatie handleiding
- (no) Installasjonshåndbok
- (pl) Instrukcja instalacji
- (pt) Manual de instalação
- (ro) Manual de instalare
- (ru) Инструкция по установке
- (sk) Inštaláčny manuál
- (sl) Navodila za montažo
- (sv) Installationsmanual
- (tr) Montaj kılavuzu
- (zh) 安装手册

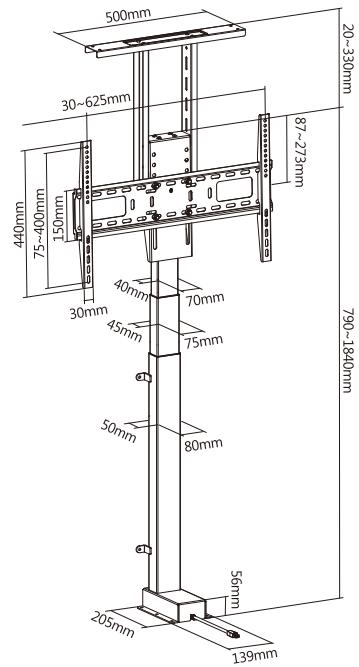


1

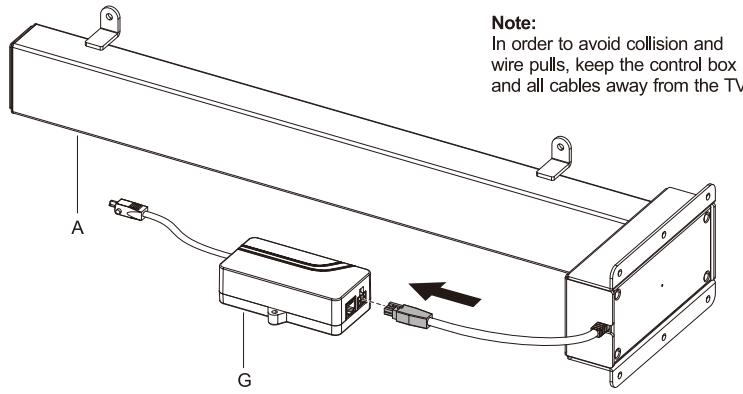



4

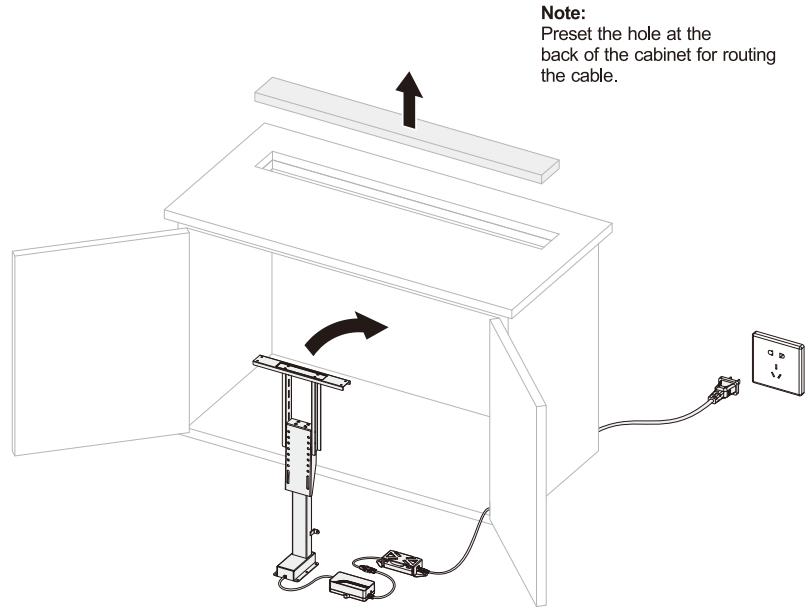


2

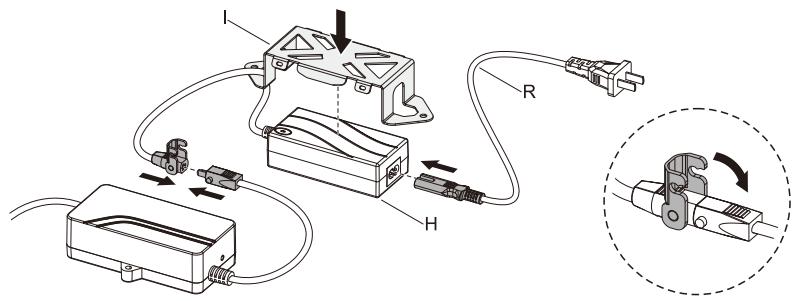


3

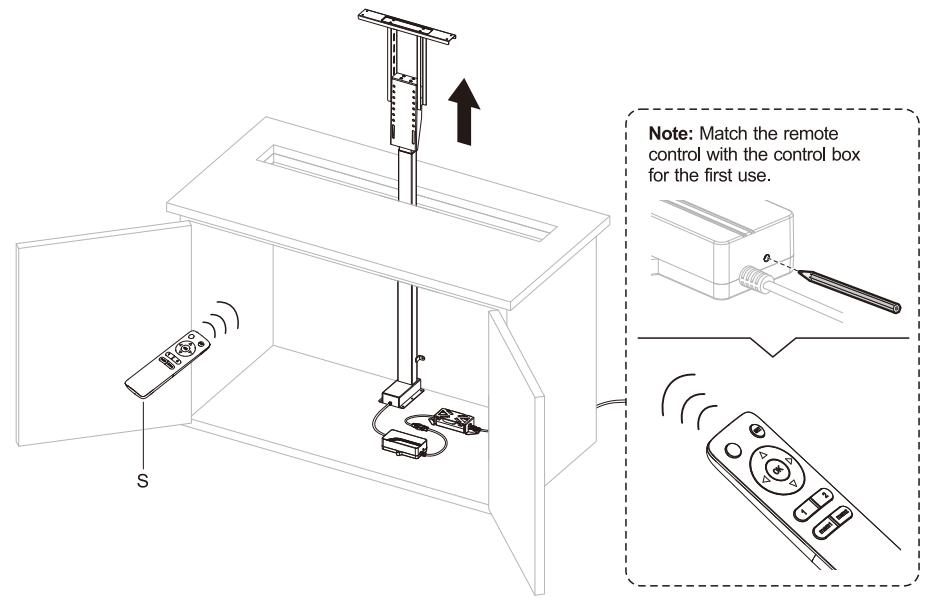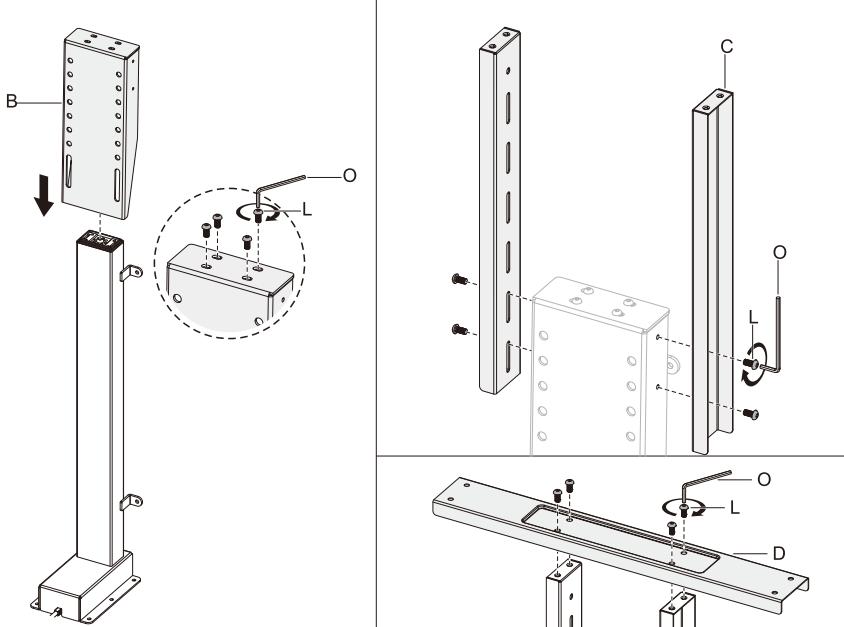


5

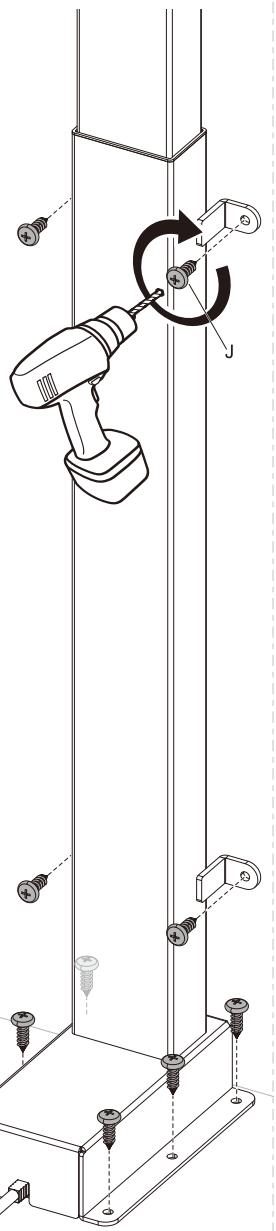


6

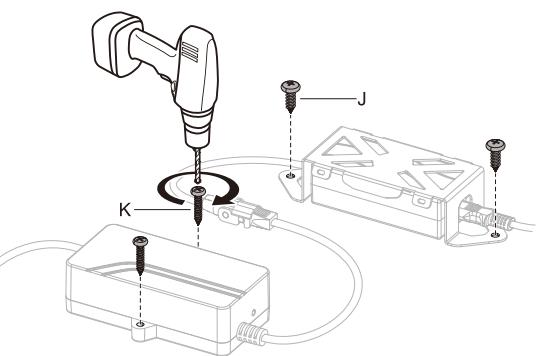


8-2

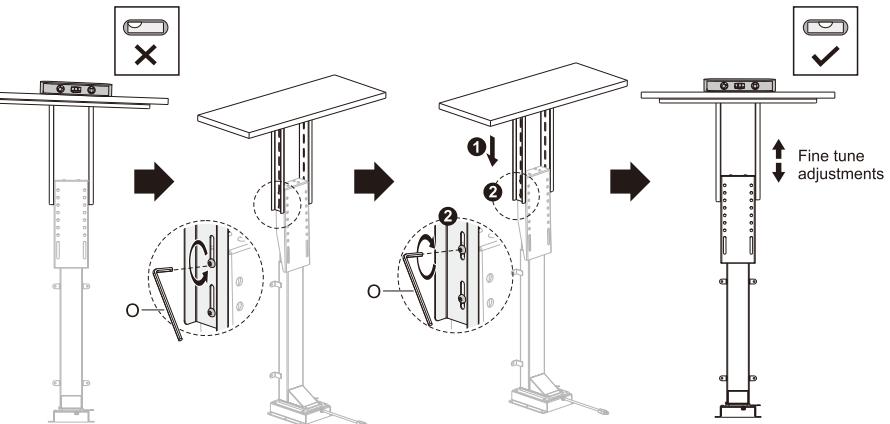


7

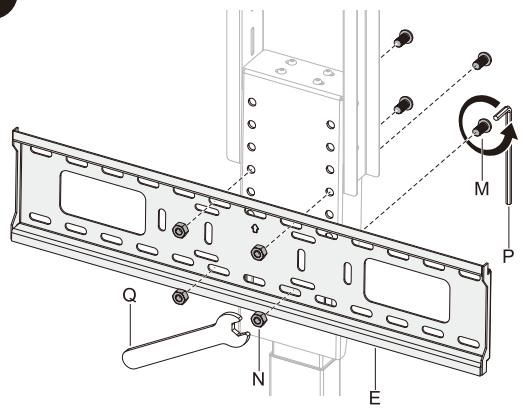


8-1

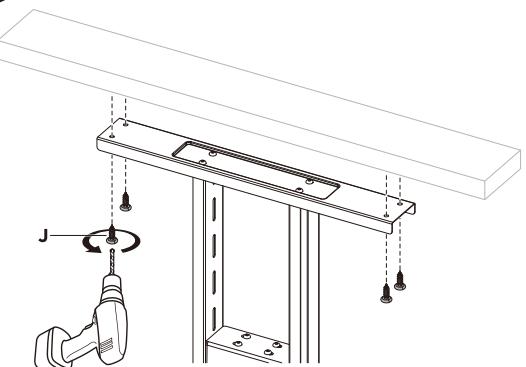


9

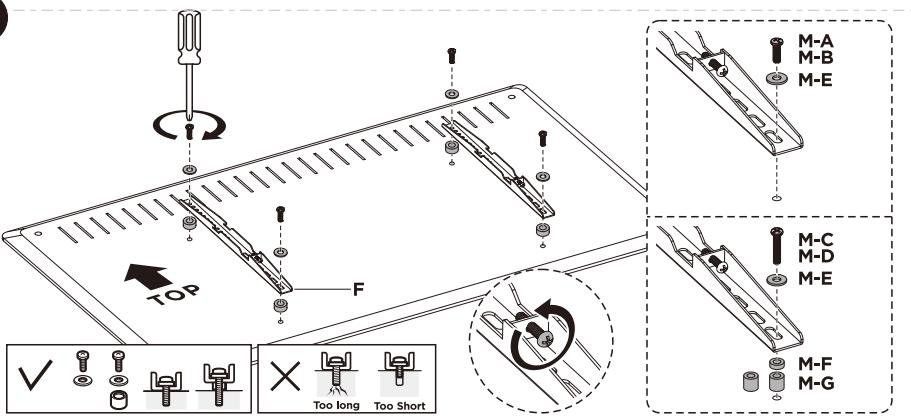

10

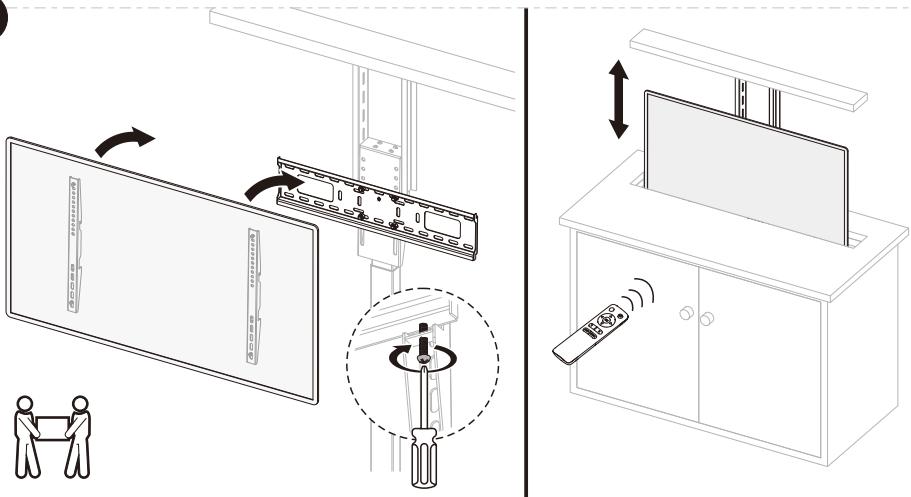

Remote Control Operation Instructions

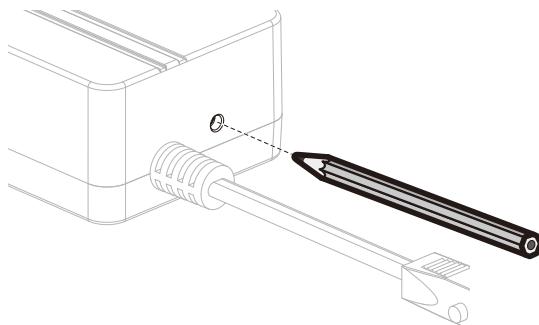


A. Coding of Remote Control and Control Box

STEP1: When the mount is powered on, press the small button on the control box with a thin tool as shown. The unit will emit a beep, indicating that the control box is on standby for program coding.

STEP2: Press the “” button on the remote control, and you will hear repeated beeps for approximately 10 seconds indicating that the remote control is being programmed. The unit will emit a beep again indicating success.

Note: Clear up the historical data when replacing a new remote control to pair. Press the small button on the control box with hearing a beep, and hold for 5 seconds to confirm the data-cleaning process is completed until you hear a beep again.

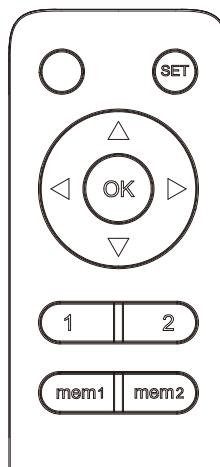

Note: The remote control is powered by two AAA batteries (not included).

B. Button Functions

1. Upward/Downward Movement

Press and hold the “ Δ ” button to lift the mount. Press and hold the “ ∇ ” button to lower the mount. (Tips: Clear up all obstacles within the range of motion.)

2. Memory Setting

Long press the “” or “” button for 3 seconds until you hear a beep, indicating that the current position has been saved to memory. The “” “” buttons can each store a different position.

3. Recall Memory

Press the “” or “” button and the mount will automatically get to the position saved in the corresponding button “” or “”.

4. Lowest Height Limit Setting

Short press the “” button five times, after each press you will hear a beep and at the fifth press two beeps. This indicates the current height is now saved as the lowest height setting. The lowest height limit will be erased should the remote control be reset.

5. Default Setting

Short press the “” button and the mount will automatically retract to the lowest position. To stop it, press the “” button again.

6. Reset Mode


Long press the “” button for 3 seconds until you hear a beep, and the mount starts to move downwards. Then the mount will move upwards a little bit when reaching the lowest position and automatically come to a stop. The system resets successfully when the unit emits two beeps.

7. Connect the Mount to a New Device

Short press the “” button five times, after each press you will hear a beep and at the fifth press two beeps, which indicates the mount is disconnecting from the current paired device. The disconnection is successful when the unit emits one beep. Then follow the *Guidebook of Tuya App Installation and Operation* to connect the mount to a new device.

Note: If the device is failed to search the mount when connecting, follow the above steps or restart the device to re-search the mount.

RJ45

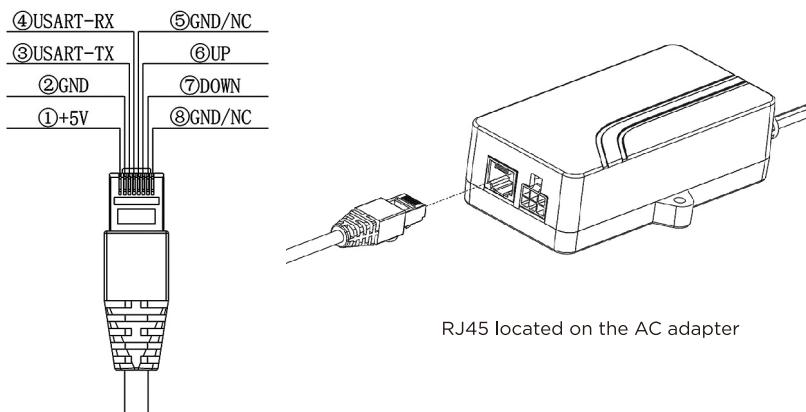

- The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

⚠️ Warnings

Safety feature/ Block Overheating feature/ Wait



- The lift has a built-in safety protection function that automatically stops the movement if something blocks it or if the motor overheats (the unit beeps four times after pressing the button). Let the TV lift cool down for 18-30 minutes before operation again.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.

⚠️ Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.

Troubleshooting Guide

In Front 📄

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. Contact your place of purchase should the answer to your question or problem not be found in this Troubleshooting Guide and/or for any after service parts and sales support.

1. Possible reasons motorized mount does not respond to remote control.

A.TV Mount

- The system may be error. Check if the unit beeps three times after pressing the button. If so, please reset the system.
- The system may be overheating. Check if the unit beeps four times after pressing the button. If so, allow the unit to cool down and return to room temperature. (about 18-30 minutes)
- The AC/DC end of the power cord may be unplugged/disconnect from the outlet/mount. Check the connection to ensure the unit has power.
- Incorrect operation. Check if the unit beeps once after pressing the button. If so, please follow the instructions found in the manual to properly operate the mount.

B.Remote Control

- The remote control operating distance may be too far and not in range of the mount. Acceptable range should be less than 30 feet (10m).
- The batteries in the remote control may be low or dead. Replace the batteries.
- The remote control may be broken. Check to see if the indicator LED found on the remote lights when a button is pressed. If not, contact your place of purchase for a replacement.

2. The TV mount stops moving during operation and emits a long beep.

- Check to see if a foreign object is impeding the mount from moving. If so, remove the object and discard.
- The weight of TV may exceed the maximum weight limitation of the mounting system.
- The motor wire may be broken. Reset the system. If the problem still exists, contact your place of purchase for replacement.

3. The TV mount is making an abnormal noise or sound.

- Check all power connections and reset the system. If the unit continues to make an abnormal noise, please contact your place of purchase for a replacement.

Disposal:

The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.




GUIDEBOOK


of Tuya App Installation
and Remote




- The guidebook is for illustration purpose only and the latest App may vary.
- Download the Tuya Smart App from App Store or Google Play.
- Wi-Fi Standard: IEEE 802.11b/g/n
Operation frequency: 2.400-2.4835GHz
RF output power: 20dBm Max

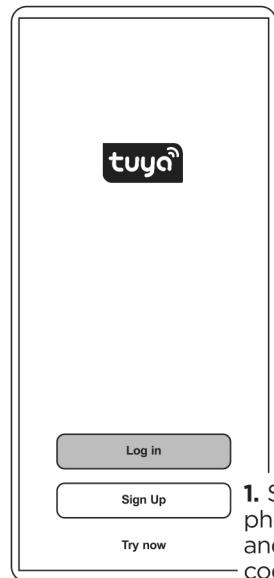


1. Sign in with phone number and a verification code, follow the instructions to enter.

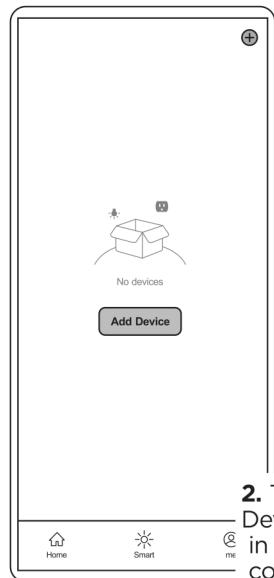

2. Tap "Add Device" / "+" icon in the upper right corner to enter the device selection page.

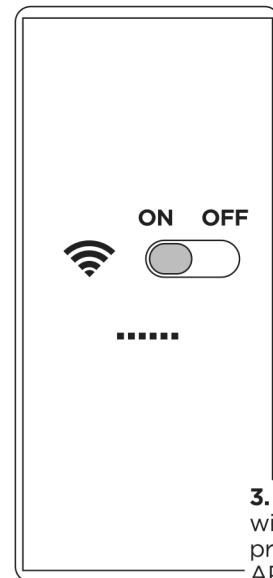


3. Turn on the 2.4G wireless as promoted by the APP, then connect your phone to the 2.4G Wi-Fi.

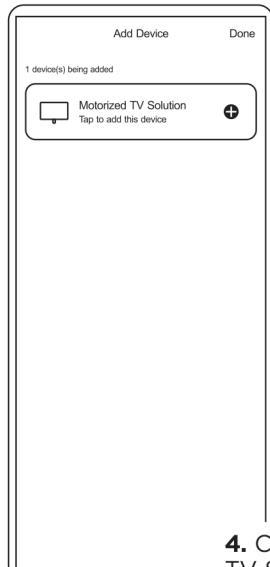


4. Click "Motorized TV Solution" in the "Auto Scan" page and go to "Next".



5. Click the Wi-Fi and enter the corresponding password and tap "Next".

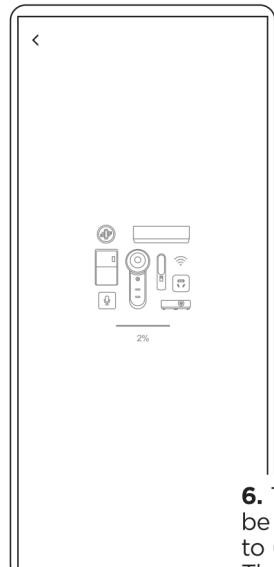


6. The device will be added after 10 to 60 seconds. The unit will emit a beep indicating success.

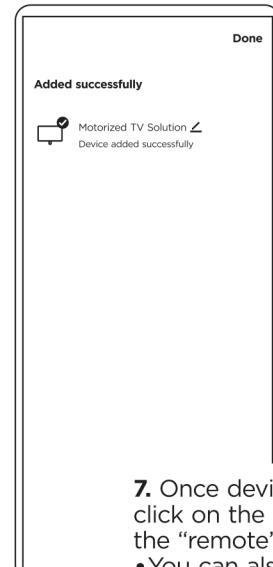

7. Once device is connected, click on the "Done" to enter the "remote" dashboard.
 - You can also edit your device name by clicking the pencil icon ↎.


Home Management Instruction (H1-H5)

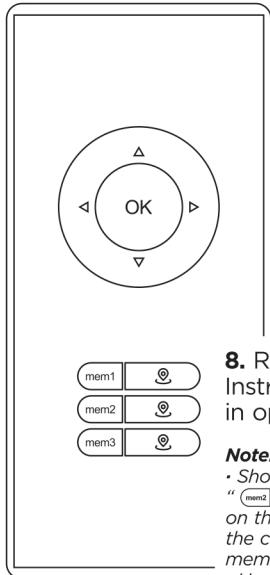


8. Refer to the Instruction Manual in operation.

Note:

- Short press the “**mem1**”, “**mem2**” or “**mem3**” button on the device to save the current position to memory.
- Use the remote control to set the lowest height limit.

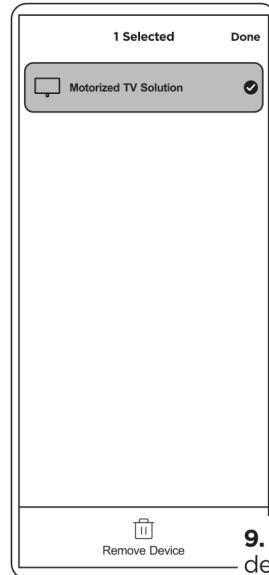


9. Long press the device to disconnect in the front page.

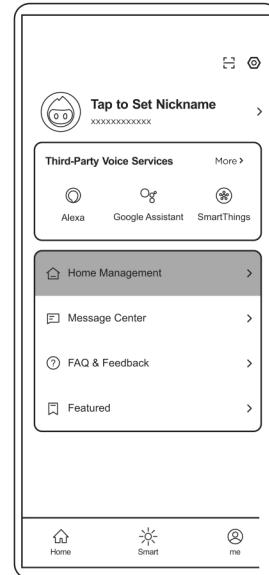

H1. Tap “me” at the bottom, then tap “Home Management”.



H2. Tap “Create a Home”

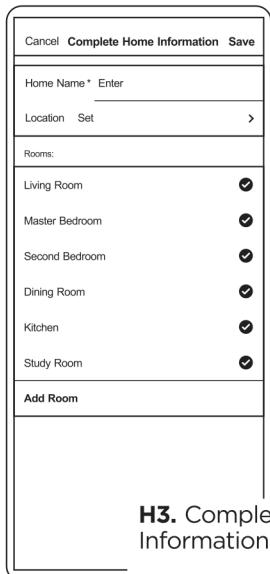


H3. Complete new Home Information and save it.

Note: Home name is compulsory and allows a maximum of 25 characters.



H4. Choose the Home you just created in the list.

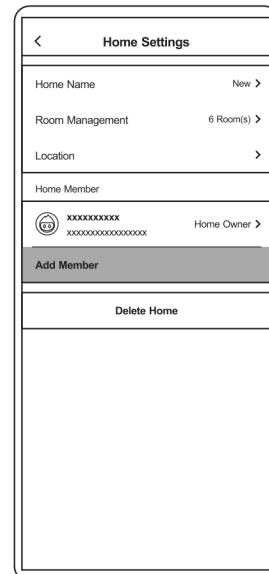

H5. Choose “Add Member” to add other users into a Home. The user will receive a notification on the app and be able to control the device after they accept the invitation.

Note: One device is not able to be connected by multiple users except for Home Management Function. Former user needs to disconnect the device on the app (or long press Remote “set” button for 5 seconds to disconnect) before new user connects.